
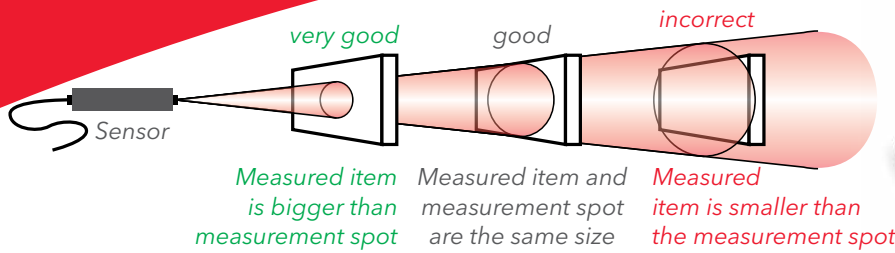


Infrared Measurement

WITH THE TLC 730

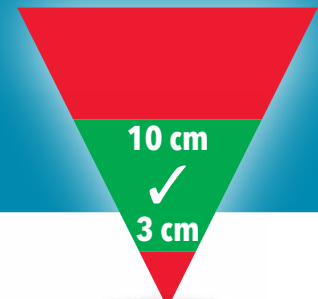

The ideal measurement distance is between 3 cm and 10 cm

For optimal measurement results, please keep the following in mind:

- Ensure that the lens is clean prior to measuring. Carefully remove any fog or dust with a soft cloth.
- Allow the instrument to acclimate after moving from a warm room into a cold room or the reverse.
- Make sure the measurement is taken within the measurement distance guidelines (see picture).
- Record the temperature once the displayed value has stabilised.

Further measurement recommendations:

Measure on metallic or shiny surfaces will cause incorrect results (e.g. yoghurt cover)

incorrect



correct



Do not measure in locations where there may be space between packaging and the product

incorrect



correct



The diameter of the entire measurement spot must always be on the measured item

incorrect



correct



Headquarters:

ebro® Electronic GmbH · Peringerstraße 10 · D-85055 Ingolstadt
Tel.+49 (841) 954 78-0 · Fax+49 (841) 954 78-80
Internet: www.ebro.com · E-Mail: ebro@xylem.com

Representatives worldwide:

www.ebro.com

-ebro-
a xylem brand